

What Benefits Can I Get If I Use The Portable nanoe™ X Generator?

Inhibits 5 Types of Pollutants



Bacteria & Viruses

nanoe™ X inhibits 99.9% viruses (H1N1 and H5N1) in 2 hours and 99.9% bacteria (E. Coli 0157, MRSA) in 1 hour.

<Adhered virus (Influenza virus H1N1 subtype)> [Test organization] Kitasato Research Center for Environmental Science [Test Method] Measured the number of virus adhered to a cloth in an approximately 1m³ sized airtight test room [Test method] nanoe™ released [Test substance] Adhered virus [Test result] Inhibited by at least 99.9% in 2 hours [21_0084_1]

<Adhered bacteria (0157)> [Test organization] Japan Food Research Laboratories [Test Method] Measured the number of bacteria adhered to a cloth in an approximately 45L sized airtight test room [Test method] nanoe™ released [Test substance] Adhered bacteria [Test result] Inhibited by at least 99.99% in 1 hour [208120890_001]

Moisturises



Skin & Hair

The mildly acidic nature nanoe™ X is similar to human skin and hair. nanoe™ X attaches on sebum and forms membranes on skin and improves the keratin texture. nanoe™ X restores the moisture of the entire area which brings you well-hydrated skin and smoother hair.

<Well-hydrated Skin> [Testing organization] FCG Research Institute, Inc. [Testing method and test result] Of 20 women 40+/- 2 years old, 10 women used a nanoe™ generating device at home for 28 days, while the other 10 women used a device with no nanoe™ generating device for 28 days at home. [19104]

<Straighter and Smoother Hair> [Testing organization] Panasonic Product Analysis Center [Testing method and test result] Approximately 46 m³ sized test room, room temperature 25 degrees Celsius, humidity 40%. Bundles 16 bundles of hair were suspended 2m from a nanoe™ generating device, with repeated operation of the nanoe™ generating device: 8 hours on and 16 hours off. [USD-KS-SS-009-TM] [Method] nanoe™ released [Test substance] Hair. Individual results may vary based on usage, and seasonal and environmental variables (temperature and humidity).

Deodorises



Odours

nanoe™ X can reduce very strong cigarette smoke odor to hardly noticeable in only an hour.

<Cigarette smoke odor> [Test organization] Product Analysis Center [Test Method] Verified using the 6-level odor intensity scale method in an approximately 23m³ sized test room [Test Method] nanoe™ released [Test substance] Surface-attached cigarette smoke odor [Test result] Odor intensity reduced by 2.4 levels in 12 min. [4AAS3-160615-N04]

What Details Do I Have to Know About The Portable nanoe™ X Generator?

Model	F-GPT01A
Applicable Volume	3m ³
Air Volume	0.07 m ³ /min
Noise	36 dB
Consumption	3.5W
Power Cord	1.5m Type C USB
Voltage	DC 5V (Adaptor 1.5A above)
Dimension	170 x 90 x 66 mm (H) x (Top) x (Base)
Weight	0.4 kg
Color	Black, Red
Origin	Guangdong, China

CONNECTION

Type C USB (with 1.5 m power cord included with the product).

OPERATION

Press the top button near the logo to turn the product on or off.


MAINTENANCE

No replacement of parts needed due to titanium-made nanoe™ X device. Only washing of outside mesh cover from the product.

WARRANTY

1 year warranty upon purchase.

How Does The nanoe™ X Technology Work?

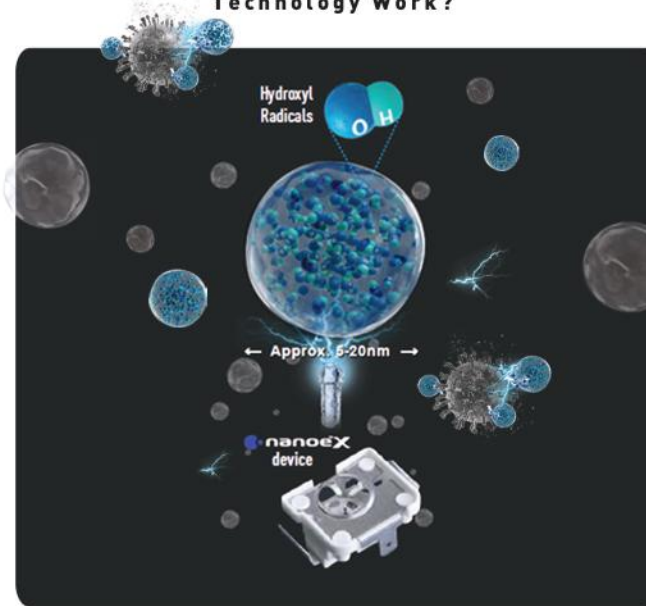


The invisible hydroxyl (OH) radicals, also called the nanoe™ X particles are released by the nanoe™ X device at a rate of 4.8 trillion/second which enables to capture virus and bacteria present in the air as well as on surfaces and turn them into water, effectively killing them.

Does The nanoe™ X Technology Really Work Against COVID-19?

Texcell, an independent testing organization based in France, has proven that nanoe™ X inhibits activity of adhered novel coronavirus (SARS-CoV-2) over 99.99% in 2 hours.

Testing Details

- (1) Organization: Texcell (France)
- (2) Test subject: Adhered novel coronavirus (SARS-CoV-2)
- (3) Test volume: 45L enclosed box (400mm×350mm×350mm)
- (4) Result: Virus activity inhibited over 99.99% in 2 hours
- (5) Report No.: 1140-01 A1

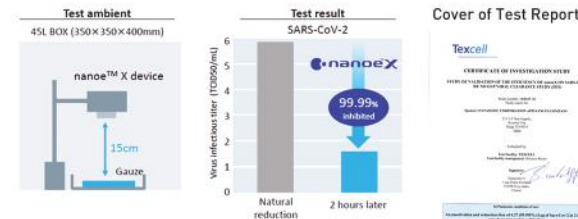

Disclaimer: This verification was designed to generate basic research data on the effects of nanoe™ X on the novel coronavirus in laboratory conditions. It was not designed to evaluate product performance.

Panasonic

Protect Yourself Against Bacteria and Viruses



F-GPT01A

Portable nanoe™ X Generator

POWERED BY

nanoe™ X

Panasonic

This product is under the Life Solutions Group of Panasonic Manufacturing Philippines Corporation. For more details, contact lifesolutions@ph.panasonic.com or visit www.panasonic.com/ph

When and Where Can I Use The Portable nanoe™ X Generator?

With estimated applicable volume of 3 cubic meters and connected using only a Type C USB cord, the Portable nanoe™ X generator is best used in enclosed spaces like cars or office cubicles, and even inside the bedroom during sleep or beside your meal while eating. This way, while doing your typical daily activities, you have protection against the invisible bacteria and viruses lurking around including SARS-CoV-2, the one causing COVID-19.



DURING SLEEP

The Portable nanoe™ X Generator is able to operate for 24 hours without failure, so it is safe to turn it on while you and your family are hibernating! Leave it on while you are asleep and you can turn it off upon waking up. As it is a lightweight device, you can bring it to work and use it there.



WHILE DRIVING

Fits perfectly in most cars' cupholders, the Portable nanoe™ X Generator provides safety against bacteria and viruses while driving. Especially when the vehicle is shared by many, having this device helps in minimizing the risk of virus transmission among the driver and passengers.



HAVING COFFEE

Eating in a restaurant or having your coffee fix? Don't forget to place the Portable nanoe™ X Generator beside you and use it for an added layer of protection. The nanoe™ X particles released by the device has no impact on your food or drinks so there is no reason to worry.